

# FUELSTAT® RESULT

FUELSTAT® Plus comes with a FREE App that verifies the result instantly after the test has been completed. It is available on iOS and Android.


For full flexibility we now offer two options for using the app, but both are designed to give users the unique digital experience of verification of FUELSTAT® test results almost instantly using an easy to use application on your smartphone. The way you use the app is down to each individual organisation.

## FUELSTAT® RESULT - MOBILE USER


NEW mobile user access gives accurate verification of test results that can be shared internally. Organisations DO NOT have to pre-register; users can immediately download the app and digitally verify their first test results within minutes.

## FUELSTAT® RESULT & REPORT

The full user experience of FUELSTAT® Result & Report allows organisations instant access to test results conducted anywhere around the globe. Managers have control to register their users and access the Report portal to track test results across all of their assets in real time.

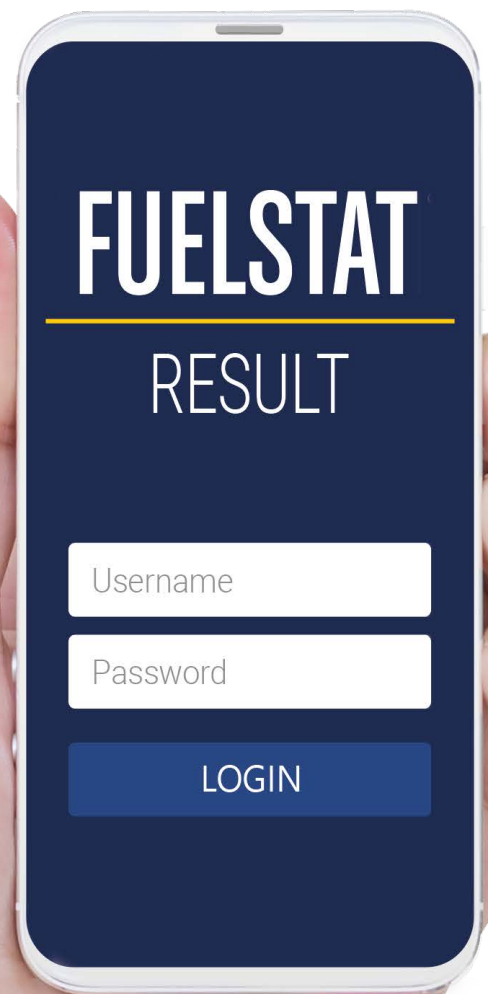

FEATURE	MOBILE USER	RESULT & REPORT
FREE download via iOS and Android	●	●
Instant verification of test results	●	●
Share test results internally	●	●
Store last 10 test results on smartphone	●	●
Pre-registration of organisation & users		●
Individual user login details		●
Manager access to portal		●
Track organisation's test results in real time		●
Secure storage of test results for trend analysis		●
PDF reports for each test result		●

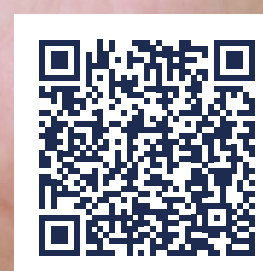

## FUELSTAT® RESULT - MOBILE USER

Mobile user access provides instant digital verification of your FUELSTAT® test result. This free to download app gives the reassurance of instant test verification, as well as storage of your last 10 tests on your smartphone.

- **Reduces risk** of misinterpretation
- **Immediate visual verification** of result
- No need for additional equipment other than a smartphone

This is becoming a popular choice for new users of FUELSTAT® in many different industries. It supports solo working principles and gives accurate verification of test results that can be shared internally. Organisations DO NOT have to pre-register; users can immediately download the app and digitally verify their first test results within minutes.



## FUELSTAT® RESULT & REPORT

This full version of the app is the option of choice for organisations wishing to manage all of their global fuel microbial contamination tests in one secure portal. Managers have access to the FUELSTAT® Report portal to view test results and can register individual users with their own unique login and password.

- Fully **detailed report** can be instantly produced in PDF format
- **Traceability** of testing
- Identification of hotspots for **planning**
- Proof of test, proof of result, proof of method

# TRIED. TESTED. TRUSTED.



FUELSTAT® ANALYSIS REPORT		
Company name: Standard Address Inputted From Portal	Registered User: Engineers Name	
Address: Input from Portal Registered Address	Test date: 24-JAN-2019	
Post code: From Portal	GPS location:	
Country: United Kingdom	Fuelstat result number: 3.361	
Customer reference: 124 - Portal Template	Printout date: 24-JAN-2019	
Identity: Example Test	Bacteria: <b>Negligible</b>	
Asset: jet 1	Fungi: <b>Heavy</b>	
Tank: Wing	Hormoconis resinae: <b>Negligible</b>	
Fuel lot: 4	Overall result: <b>Heavy</b>	
Fuelstat test lot: HR 2 411	Test method: ASTM D8070-16	
Comments		
Example test Report - Annual Maintenance Check		
FUELSTAT® Result data interpretation and guidance		
Alert level	Phase	Target antigen limits
<b>Negligible</b>	Fuel	Up to 150 µg/L
	Water	Up to 33 µg/ml
<i>Negligible - Indicates good housekeeping practices</i>		
<b>Moderate</b>	Fuel	Between 150-750 µg/L
	Water	Between 33-166 µg/ml
<i>Moderate - Needs the user to confirm the result and increase the frequency of water drainage</i>		
<b>Heavy</b>	Fuel	Greater than 750 µg/L
	Water	Greater than 166 µg/ml

### HEADQUARTERS & GLOBAL SALES OFFICE

Conidia Bioscience Ltd  
Bakeham Lane, Egham,  
Surrey, TW20 9TY, UK  
+44 (0)1491 829102  
info@conidia.com

Conidia  
Bioscience  
WWW.CONIDIA.COM

### US SALES OFFICE

Conidia Bioscience Inc  
15 Briarwood Ln, Dover,  
NH, 03820, USA  
+1 844 438 3578  
info@conidia.com