

FUELSTAT®

ConidiaBioscience

FUELSTAT

RESULT

LOGIN

FUELSTAT® resinae PLUS

Ident # _____
Tank # _____
Result : _____
Operator _____
Date : _____
Lot # : _____

Sta/site: _____

Time : _____

GUIDELINES:

Instructions for use of the FUELSTAT® Result app
(mobile user)

FUELSTAT® Result is a smartphone-based app on iOS and Android that helps interpretation of the FUELSTAT® test in an easy to use format. The app provides digital verification of test results without paper and reduces the risk of incorrect interpretation.

Conidia Bioscience Ltd
Bakeham Lane, Egham
Surrey, TW20 9TY, UK

**Conidia
Bioscience**

Conidia Bioscience Inc
15 Briarwood Ln, Dover,
NH, 03820, USA

Background

FUELSTAT® Result is a smartphone-based app on iOS and Android that helps interpretation of the FUELSTAT® test in an easy to use format. The app provides digital verification of test results without paper and reduces the risk of incorrect interpretation.


Links to Instructional FUELSTAT® Videos

- [FUELSTAT® Plus](#)
- [FUELSTAT® Result app \(mobile user access\)](#)



Mobile users will need to download and install the FUELSTAT® Result app

The app can be downloaded here:

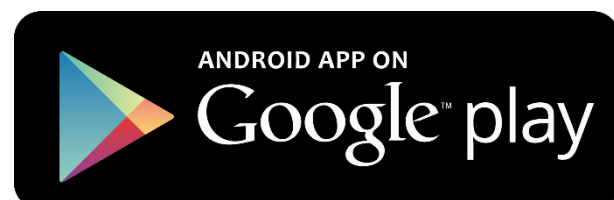

<https://conidia.com/fuel-testing-kits/fuelstat-result-app/#register>

The FUELSTAT® app is designed to work on the following models: iPhone 6 onwards, iPad Pro, Samsung Galaxy 6 onwards.

The app has also been used successfully by most other modern brands and models of smartphones and tablets running on an Android platform, so long as the camera uses a similar API and that they have an LED flash that can be controlled by the app software. If you have any problems with use of your particular device then please contact info@conidia.com

Install and open app



Mobile user login details:


- Username: **user.mobile@conidia.com**
- Password: **fuelstat** (all lower case)




To use the app, first run a test

Open the app and enter the details you need to identify the actual test¹, this should be the same as the data you enter on the actual paddle.

Press **Run** - App will focus and scan paddle, ensure that the dotted lines match the shape of the 6 test cells on the paddle - Once the scan is complete the app shows the results.

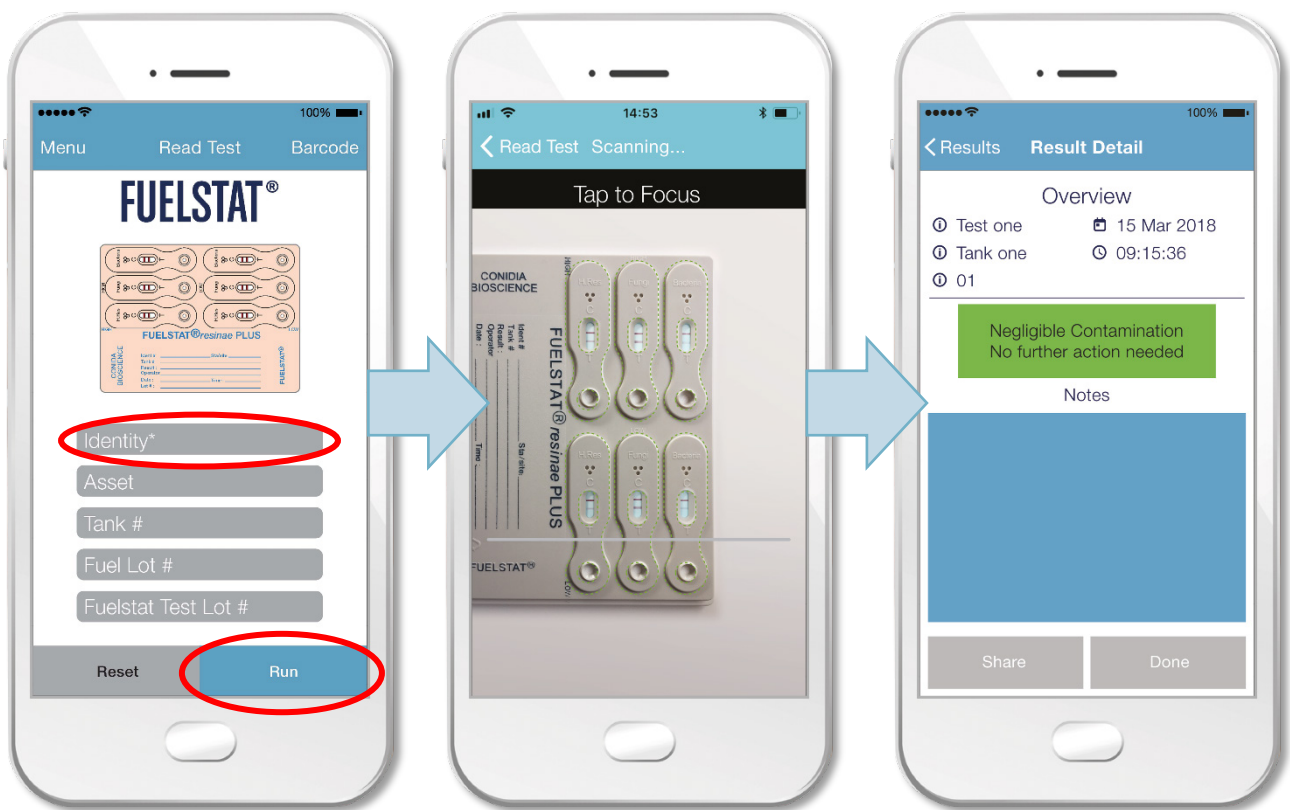

The result will be split into the following categories:

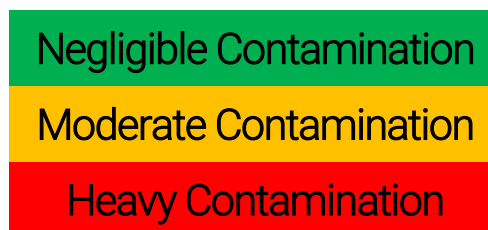

¹ The only mandatory field is **Identity***. This is a free text field and you can enter any information you choose, e.g. 'Test' or 'Employee Identity No.' No data is shared with third parties or can be viewed by any other user's device using this mobile user login identity.

Capture and share information to your Manager

This is optional - there are 2 options for sharing the result:


1. Use the **Share** button

This will give you the option of sending basic test result data via either email or SMS.

2. Capture via screenshot


You can copy the screen display to your device, then share that image to your manager:

- **iPhone:** Press and hold the Power button on the right side and click the Home button at the exact same time.
- **Android:** Press the Power button and Volume down key at the same time. Hold them down until you hear an audible click or a screenshot sound.

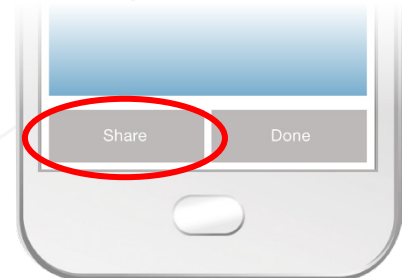

Completion of test

When you have completed the test press the **Done** button.

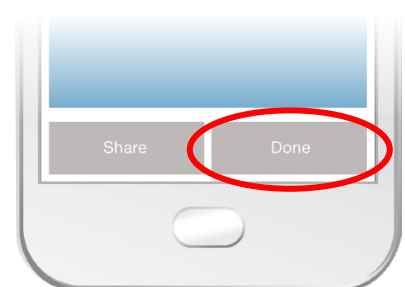

Test Result History

The **Result History** tab will save your last 10 recorded test results on the app.



Who we are:

FUELSTAT® fuel tests are developed, manufactured and marketed by Conidia Bioscience Limited. Based in UK, Conidia Bioscience Limited was founded in early 2000's by experts in immunoassay techniques and holds the internationally patented intellectual property for FUELSTAT®.

FUELSTAT® Result is hosted by Conidia Bioscience Limited and its service partners on secure servers and does not share any data with third parties.

Where to find us:

FUELSTAT® is distributed globally by a network of specialist distributors covering the major sectors. Contact info@conidia.com who will arrange for a distributor to support you.

HEADQUARTERS & GLOBAL SALES OFFICE

Conidia Bioscience Ltd
Bakeham Lane, Egham,
Surrey, TW20 9TY, UK
+44 (0)1491 829102
info@conidia.com



**Conidia
Bioscience**
WWW.CONIDIA.COM

US SALES OFFICE

Conidia Bioscience Inc
15 Briarwood Ln, Dover,
NH, 03820, USA
+1 407 616 0315
info@conidia.com